

Pantech Wireless, Inc.
www.pantechusa.com

USER MANUAL



5U010233000

© 2006 Pantech Wireless Inc. All right reserved for Pantech Wireless, Inc. and its related entities.
Specification subject to change without a notice.

PN-218 User Guide

PANTECH

alltel
wireless



USER GUIDE PN-218

Camera with Flash
Speakerphone
Access Apps*

CTIA Certified



WELCOME

Thank you for choosing the PN-218 camera phone. This new mobile handset features dual LCD screen displays with a unique landscape-oriented main screen. There is a 262K color 1.8" TFT display on the inside, and a smaller 65K 1.0" sub-display on the outside. The landscape view on the main screen will provide users with a customary format in which to view text messaging and menu options, but also allows for a better gaming and browsing experience. The outer display allows users to quickly view incoming calls, message alerts and date/time functions. Utilizing the CDMA2000 1x networks with a QUALCOMM® MSM6050 chipset that is GPSOne™ capable, this phone allows for high-speed communication services such as wireless Internet access, messaging and image transmissions. The phone's built-in 330K pixel camera also includes auto flash and zoom.

Equipped with today's latest features, this phone is Mobile Web 2.0 enabled and features Axxess Apps, which allows users to download ringtones, wallpapers, screensavers, games and more to their phone. In addition, it has CMX 32 polyphonic ringers and supports two-way short, enhanced and multimedia messaging services. This phone also contains user-friendly features such as a built-in speakerphone and voice activated dialing for hands-free operation, T9 predictive text input for easy text entries, is TTY compatible and supports English and Spanish languages.

IMPORTANT INFORMATION

This PN-218 user guide contains very important information about how to handle and use the product.

Please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

TABLE OF CONTENTS

CHAPTER 1. BEFORE USING YOUR PHONE	5
INSIDE THE PACKAGE	6
HANDSET DESCRIPTION	7
SYSTEM STATUS BAR INDICATOR DISPLAY AREA	9
BATTERY USAGE	11
BATTERY INSTALLATION	11
BATTERY REMOVAL	11
BATTERY CHARGING	12
POWER CONNECTION	12
BATTERY USAGE TIMES	13
BATTERY STANDBY TIMES (FOR NEW BATTERY)	13
BATTERY HANDLING INFORMATION	14
DOs	14
DON'Ts	14
CHAPTER 2. BASIC OPERATION	15
TURNING THE PHONE ON / OFF	16
TURNING THE PHONE ON	16
TURNING THE PHONE OFF	16
ACCESSING THE MENU	17
MENU SUMMARY	18
BASIC FUNCTIONS	21
MAKING A CALL	21
ANSWERING CALLS	22
SPEAKER PHONE	22
HARD/TIMED PAUSE FEATURE	23
ANSWERING A CALL	23
3-WAY CALLING	24
CALLER ID FUNCTION	24
CALL WAITING FUNCTION	25
ADJUSTING VOLUME	25
ENTER LOCK MODE	25
DURING A CALL	26
SEND TEXT MSG	26
MUTE/UNMUTE	26
SEND DTMF	26
VOICE PRIVACY	26
LOCATION	27
CONTACTS	27
MAKING AN EMERGENCY CALL	28
911 IN LOCK MODE	28
911 USING ANY AVAILABLE SYSTEM	28
CHAPTER 3. MEMORY FUNCTION	29
STORING A PHONE NUMBER	30
ENTERING LETTERS, NUMBERS & SYMBOLS	31
STANDARD INPUT MODE	32
T9 INPUT MODE	33
NUMERIC MODE	34
SYMBOL MODE	34
CHAPTER 4. MENU FUNCTION	35
CONTACTS	36
FIND	36
FIND BY NAME	36
FIND BY NUMBER	37
ADD NEW	38
GROUP	38
ADD NEW GROUP	38
CHANGE GROUP NAME	39
ERASE GROUP	39
SPEED DIAL	40
MSG. GROUP	41
ADD NEW MSG. GROUP	41
CHANGE MSG. GROUP NAME	41
SEND TEXT MSG. GROUP	42

TABLE OF CONTENTS

SEND PHOTO MSG. GROUP	43
ERASE MSG. GROUP	43
MY PHONE #	44
RECENT CALLS	45
ALL CALLS	45
MISSSED CALLS	46
RECEIVED CALLS	47
DIALED CALLS	48
CALL TIMERS	49
LAST CALL	49
ALL CALLS	49
HOME CALLS	49
ROAM CALLS	50
CUMULATIVE CALLS	50
DATA CALLS	51
RECEIVED	51
TRANSMITTED	51
TOTAL	51
ACCESS APPS	52
START ACCESS APPS	52
DOWNLOADING APPLICATIONS	52
DOWNLOADING MELODIES/WALLPAPERS	53
APPLYING MELODIES/WALLPAPERS	53
CHECKING MEMORY IN THE DATA FOLDER	53
ERASING AN APPLICATION	54
MEDIA GALLERY	55
IMAGES	55
GRAPHICS	55
ANIMATIONS	55
PHOTO	56
TONES	56
SHUFFLE	57
WALLPAPER	57
RING TONES	57
SETTINGS	58
SOUNDS	58
RINGER TYPE	58
VOLUME	59
ALERT	60
ROAM RINGER	61
tone LENGTH	62
ETIQUETTE	62
DISPLAY	63
GRAPHICS	63
SUB SCREEN	65
GREETING MESSAGE	65
CONTRAST	66
BACKLIGHT	66
DATA SERVICE	67
CONNECTION	67
WAP/BREW	67
SECURITY	68
PHONE LOCK	68
RESTRICT	71
CHANGE CODE	71
SPECIAL #'S	71
ERASE ALL	72
RESET PHONE	72
1X PASSWORD	72
RESTRICTIVE DIALING	73
SET ON/OFF	73
CHANGE SPECIAL CODE	73
OTHERS	74
ANSWER OPTIONS	74
AUTO RETRY	75
LANGUAGE	76
VOICE PRIVACY	76

TABLE OF CONTENTS

TTY MODE	77
LOCATION	77
SYSTEM	78
SET MODE	78
NAM SETTING	78
PRL ID	79
ERI BANNER	79
PHONE INFO	80
S/W VERSION	80
H/W VERSION	80
ACCESS VERSION	80
AIRPLANE MODE	81
TOOLS	82
SCHEDULE	82
ADD NEW PLAN	82
VIEW PLAN	83
ALARM	84
MEMO PAD	86
ADD MEMO	86
VIEW MEMO	86
SETTINGS	86
CALCULATOR	87
WORLD CLOCK	88
STOP WATCH	89
CAMERA	90
TAKE PHOTO	90
TAKING A PICTURE THROUGH THE MENU	90
TAKING A PICTURE IN IDLE MODE	90
CAMERA MODE OPTIONS	91
PHOTO GALLERY	92
PHOTO MESSAGE	93
HELP	94

CHAPTER 5. VOICE SERVICE95

VOICE TOOLS MENU	96
VOICE MEMO	96
VOICE DIAL	97
TRAIN WORDS	98
YES	98
NO	98
WAKE-UP	99
UNDO TRAIN ALL	99
VOICE SETTING	100
SET ACTIVE	100
HFK MODE	100
VOICE RECOGNITION MODE	101
NAME	101

CHAPTER 6. VOICE MAIL, TEXT AND PHOTO MESSAGE103

WHEN A NEW MESSAGE ARRIVES	104
NEW TEXT MSG	105
NEW PHOTO MSG	106
VOICE MAIL	108
INBOX	109
PHOTO INFO	109
PLAY SLIDE SHOW	109
REPLY	109
REPLY WITH COPY	110
FORWARD	110
SAVE MEDIA	110
SAVE TO CONTACT	110
SAVE TO SAVED	111
SAVE TO QUICK TEXT	111
BLOCK SENDER	111
LOCK & UNLOCK	111

TABLE OF CONTENT

OUTBOX	112
CHECKING SENT TEXT MESSAGES	112
PHOTO INFO	112
RESEND	112
EDIT MESSAGE	113
SAVE TO CONTACT	113
SAVE TO SAVED	113
LOCK & UNLOCK	113
STATE	113
WEB ALERTS	114
SAVED	115
QUICK TEXT	116
ERASE ALL	117
ERASE MESSAGES	117
SETTINGS	118
AUTO SAVE	118
SAVE SENT MSG	118
PHOTO RECEIVE	118
AUTO ERASE	119
INBOX	119
OUTBOX	119
DEFAULT CALLBACK	120
EDIT VOICE CALLBACK	120
REMIN	120
EDIT SIGNATURE	121
DIRECT VIEW	121
ENTRY MODE	122
BLOCK OR UNBLOCK	122

CHAPTER 7. WEB BROWSING	123
START INTERNET BROWSER	124
ACCESS THE INTERNET	124
BROWSER MENU	124
HOME	124
BACK	124
HISTORY	124
SETTINGS	125
CLEAR	126
SHOW URL	126
RELOAD	126
SEND LINK	126
EXIT	126

CHAPTER 8. SAFETY AND WARRANTY	127
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES	128
DRIVING SAFETY	129
ELECTRONIC DEVICES	130
OTHER SAFETY GUIDELINES	131
PRECAUTIONS	132
SAFETY INFORMATION FOR FCC RF EXPOSURE	133
CAUTIONS	133
SAR INFORMATION	134
FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES	136
FDA CONSUMER UPDATE	138
PROTECT YOUR WARRANTY	142
12 MONTH LIMITED WARRANTY	143

Chapter 1

BEFORE USING YOUR PHONE

 
- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION

INSIDE THE PACKAGE

This package should include all items shown below. If any of the items is missing or different, immediately contact the retailer where you purchased the phone.



Handset

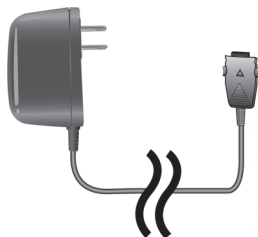

AC Travel Charger



User Manual



 
Standard Battery

HANDSET DESCRIPTION

The PN-218 weighs 3.84 oz. The dimensions are 3.02" x 2.15" x .96".




HANDSET DESCRIPTION

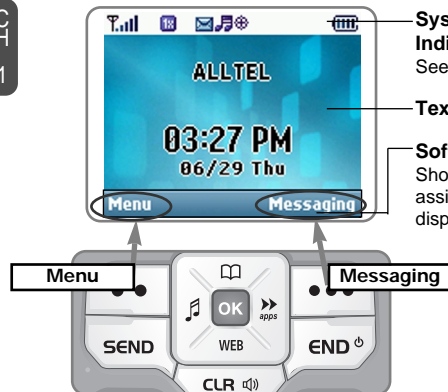

System Status Bar Indicator Display Area
See page 9 for a list of icons.

Text & Graphic area

 Soft Key Display Area
Shows the functions currently assigned to each soft key and displays some icons.

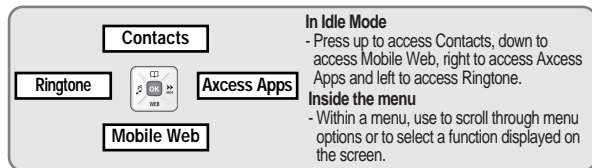

In Idle Mode
- Press up to access Contacts, down to access Mobile Web, right to access Access Apps and left to access Ringtones.
Inside the menu
- Within a menu, use to scroll through menu options or to select a function displayed on the screen.



Press to make or receive a call.



Press to turn the phone on/off, to terminate a call or to return to the initial page.



(Left Soft Key) Press to access the main menu or function displayed on bottom line of the screen.



(Right Soft Key) Press to access the message menu or function displayed on bottom line of the screen.



Press to clear a digit from the display or to return to the previous page.
Press and hold to enable speaker phone mode.



Press and hold to enter etiquette (silent) mode.



Press and hold to enter lock mode.

HANDSET DESCRIPTION

SYSTEM STATUS BAR INDICATOR DISPLAY AREA



Signal Strength
The more lines, the stronger the signal.



Roaming
Phone is out of home area.



Voice Privacy
Indicates Voice Privacy mode, with enhanced encryption.



Dormant
Indicates your phone is in a dormant state during a data call. Your phone goes to Dormant mode when you have not had any activity on a page for some time - your connection is still active and you can make and receive calls.



No Service
Indicates the phone cannot receive a signal from the system.



Mute
Indicates the phone is in Mute mode or the microphone is off.



Scratch Pad
Display when scratch pad is in use during a call.



TTY
Indicates your phone is active in TTY mode.



GPS Icon
Indicates the Location Service of your phone is disabled/enabled.



Locked
Indicates your phone is locked.



Battery
Battery charging level — the more blocks, the stronger the charge.



Headset Mode
Indicates your phone is activated in hands free mode.

HANDSET DESCRIPTION



Alarm

Appears when either a calendar or an alarm is set.



Vibrate Only

The phone will vibrate when a call is received.



All Off

Indicates the ringer volume is set to off.



1X Service

1X Mode indicates that the phone is supporting data transmission up to 144 Kbps (kilobits per second).



Voicemail

Indicates you have voicemail messages.



New Messages

Indicates you have new Text or voice messages.



UP Browser

Phone is in the progress of UP Browser.



Data Only

Receives an asynchronous call as a voice call.



Fax Only

Receives a fax call as a voice call.



Speakerphone

The phone is in speakerphone mode.



 
Auto Answer

The phone is in answering machine mode.

BATTERY USAGE


BATTERY INSTALLATION

- 1 Place the battery on the back of the handset and slide into place. 2 Push the battery down until it locks into place.

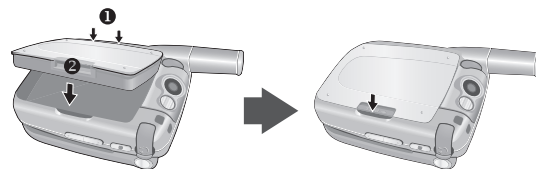

BATTERY REMOVAL

 - 1 Pull down the release latch, lift up the battery and 2 remove the battery from the handset.

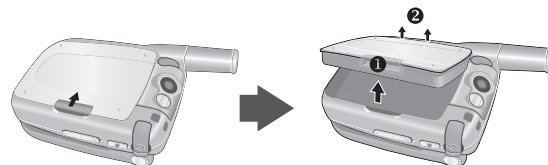


If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.

BATTERY USAGE

BATTERY CHARGING

POWER CONNECTION

 - 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be installed onto the phone.

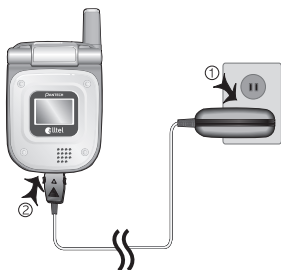

- When you charge the battery with the phone power off, you will see a charging status screen. You cannot operate the phone until it is powered on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY USAGE

BATTERY USAGE TIMES

The usage time or talk time is subject to your distance from the cell base station that communicates with your phone. The farther you are, the more power your phone will consume. It is also subject to the types of frequency band its operating in. Below is a chart distinguished between the DCS (1800 MHz) and PCS (1900 MHz) mode.

Battery Capacity	DCS	PCS
STD 1000 mAh	Up to 207 Minutes	Up to 160 Minutes
EXT 1350 mAh	Up to 282 Minutes	Up to 270 Minutes

BATTERY STANDBY TIMES (FOR NEW BATTERY)

The standby time is subject to the condition of your battery and how much charge it has. Extreme hot or cold temperature will also reduce your battery charge. Below is a chart distinguished between the DCS (1800 MHz) and PCS (1900 MHz) mode for a new battery.

Battery Capacity	DCS	PCS
STD 1000 mAh	Up to 190 Hours	Up to 172 Hours
EXT 1350 mAh	Up to 326 Hours	Up to 293 Hours



- These times are for a new battery. Usage and Standby time may decrease over time.
- Talk time for the standard battery: about 207 minutes. Standby time for the standard battery: about 190 hours.

BATTERY HANDLING INFORMATION

DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Keep batteries in a temperature between 41°F (5°C) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This will damage the battery.
- Don't expose the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire or it may explode.

Chapter 2

BASIC OPERATION

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

TURNING THE PHONE ON / OFF

TURNING THE PHONE ON

- 1 Press **END** to turn on the phone. The “alltel” logo appears and the tone sounds.



 
- To select a logo, refer to page 63 for more details. (Settings>Display>Graphics>Power On).
- If your phone is locked, “Password” appears on the display. Enter your 4-digit password to unlock your phone. The default password is the last 4 digits of your phone number.

TURNING THE PHONE OFF

- 1 Press and hold **END**, until your “alltel” logo appears.

ACCESSING THE MENU

Your phone can be customized via the menu. You can access the function in the menu by scrolling with the Navigation Key or by pressing the number that corresponds with the menu item.

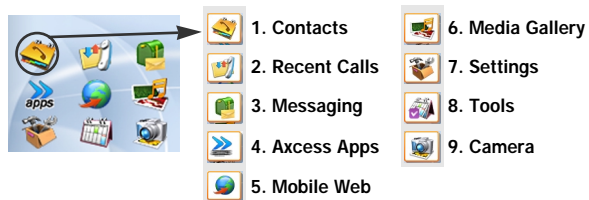

- 1 To access the menu in the idle mode, press **⏏** [MENU].
- 2 Press the Navigation Key up, down, left or right to scroll through the menu options.
- 3 To return to the previous page, press **⏏**. To exit the current menu and return to the idle mode, press **END**.
- 4 Press **OK** to enter a function that you have selected or press its assigned number.








Quick Keys



In the idle mode, you can quickly access the functions by pressing on the Navigation Key as follows:

- Up : Contacts
- Down : Mobile Web
- Right : Access Apps
- Left : Ringtone

MENU SUMMARY

1. Contacts 	1. Find 2. Add New 3. Group 4. Speed Dial 5. Msg. Group 6. My Phone #	1. By Name 2. By Number	
2. Recent Calls 	1. All Calls 2. Missed Calls 3. Received Calls 4. Dialed Calls 5. Call Timers 6. Data Calls	1. Last Call 2. All Calls 3. Home Calls 4. Roam Calls 5. Cumulative Calls 1. Received 2. Transmitted 3. Total	
3. Messaging 	1. New Text Msg 2. New Photo Msg 3. Voice Mail 4. Inbox 5. Outbox 6. Web Alerts 7. Saved 8. Quick Text 9. Erase All 10. Settings	1. Inbox 2. Outbox 3. Saved 1. Auto Save 2. Auto Erase 3. Default Callback 4. Edit Voice C.B 5. Remind 6. Edit Signature 7. Direct View 8. Entry Mode 9. Block or Unblock	1. Read Msg 2. Read & Unread Msg 1. Save sent MSG 2. Photo receive 1. Inbox 2. Outbox 1. Block 2. Unblock 3. View List of Blocked Addresses
4. Access Apps 	1. Access Apps		
5. Mobile Web 	1. Connect web		

MENU SUMMARY

6. Media Gallery 	1. Images 2. Photos 3. Tones 4. Shuffle	1. Graphics 2. Animations 1. Wallpaper 2. Ring Tones	
7. Settings 	1. Sounds 2. Display 3. Data Service 4. Security 5. Restrictive Dialing 6. Others	1. Ringer Type 2. Volume 3. Alert 4. Roam Ringer 5. Tone Length 6. Etiquette 1. Graphics 2. Sub Screen 3. Greeting Message 4. Contrast 5. Backlight 1. Connection 2. WAP/BREW 1. Phone Lock 2. Restrict 3. Change Code 4. Special # s 5. Erase All 6. Reset Phone 7. 1X Password 1. Set On/Off 2. Change Special Code 1. Answer Options 2. Auto Retry 3. Language	1. Ringer 2. Messages 3. Voice Mail 1. Ringer 2. Key Tone 3. Voice Call 4. Speaker Phone 1. Minute 2. Roam 3. Connect 4. Fade 5. On/Off Tones 1. Wallpaper 2. Power On 3. Power Off 4. Received 5. Dialed 6. Screen Saver 1. Dialed 2. Recent Calls 3. Camera 4. Data Call 5. 900#s 6. Long Distance 1. 911 2. *911 3. #911 1. PAP User ID 2. PAP Password 1. Call Answer 2. Active Flip 3. Auto Answer

MENU SUMMARY

CH
2

8. Tools 	7. System	4. Voice Privacy 5. TTY Mode 6. Location 1. Set Mode 2. Nam Setting	1. Auto NAM 2. Change NAM
	8. Phone Info	3. PRL ID 4. ERI Banner 1. S/W Version 2. H/W Version 3. Access Version	
	9. Airplane Mode		
9. Camera 	1. Voice Service	1. Voice Memo 2. Voice Dial 3. Train Words 4. Voice Setting	1. Record 2. Play 3. Play Speaker 4. Erase All 1. Record 2. Play 3. Play Speaker 4. Erase All 1. Yes 2. No 3. Wake-Up 4. Undo Train All Set Active HFK Mode
	2. Schedule	1. Add New Plan 2. View Plan	
	3. Alarm	1. Alarm 1 2. Alarm 2 3. Alarm 3	
	4. Memo Pad	1. Add Memo 2. View Memo 3. Settings	
	5. Calculator 6. World Clock 7. Stop Watch		
9. Camera 	1. Take Photo 2. Photo Gallery 3. Photo Message	1. New Photo 2. Saved Photo	
	4. Help		



BASIC FUNCTIONS

MAKING A CALL


- 1 Enter a phone number using the number key pad or select a number from the contact list.



Editing the phone number you have entered :


- To erase one digit at a time press .
- To erase the entire number, press and hold .



Finding the phone number with your contact list :

- Enter a part of the phone number, then press  [FIND], to display your contact list.



If name field of the contact list entry is empty, the highest priority phone number will be displayed. If name and phone number fields are empty, e-mail address will be displayed.


Sending a text or photo message with phone number :

- Enter a part of the phone number, then press  [MENU], select "Send Text Msg or Send Photo Msg.". Refer to page 105 or page 106 for more details on "Send Text Msg or Send Photo Msg".

- 2 Press  to make the call. This icon  will appear on the display.




- If "CALL FAILED" appears on the display or the line is busy, press  or .
- If you activate the "Auto Retry" function, the phone will automatically retry for the number of times you have selected. (Refer to page 75).
- When you place or receive a call from stored phone numbers, both the name or phone number will be displayed.
- Another way to make a call is through the VR mode, which is called "VAD (Voice Activated Dialing)". Refer to page 97 (Voice Service) for more details.
- If "Enter Lock Code" appears on the display, enter your 4 digit password to unlock your phone.

- 3 To end a call, press .


CH
2


BASIC FUNCTIONS

ANSWERING CALLS

- 1 When your phone rings or vibrates, press  to answer the incoming call.
(Depending on your phone's settings, you may also answer incoming calls by opening the flip or by pressing any digit key.)




To ignore incoming calls, press  [IGNORE].

- 2 To end a call, press  .

SPEAKER PHONE


The speaker phone feature lets you hear through the speaker and talk without holding the phone.

- 1 To turn the speaker phone on/off while in idle, answering or calling modes, press and hold  .
- 2 The phone returns to normal (Speaker Phone Off) after ending a call or when the phone is turned off and back on.



BASIC FUNCTIONS

HARD/TIMED PAUSE FEATURE







Pauses are used for automated systems (e.g., voice mail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.

- 1 To insert a hard/timed pause, enter a phone number then press  [MENU]. Select either a Hard Pause ("P") or a Timed Pause ("T").


- **Hard Pause** : Inserting a "Hard Pause" means that the caller has to press the "Send" key before the dialing continues.
- **Timed Pause** : Inserting a "Timed Pause" suspends the dialing for 2 seconds before the dialing continues.

- 2 Press  to dial or  to save.
(Refer to page 30 for more details about storing a phone number.)

ANSWERING A CALL

- 1 To answer a call, press any key except  ,  ,  ,  ,  or  .




- See page 74 for more information on setting answering call options.

- 2 To end the call, press  .

BASIC FUNCTIONS

3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be applied for each of the two calls.

- 1 Enter a number you wish to call then press .
- 2 Once you have established the connection, enter the second number you wish to call then press .
- 3 When you're connected to the second party, press  again to begin your 3-Way call.

NOTE

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.



CALLER ID FUNCTION

Your phone can identify a caller by displaying his or her phone number. If the caller's name and number are already stored in your phone book, the name or number will appear. The caller ID is then stored in the call history.

BASIC FUNCTIONS

CALL WAITING FUNCTION

This function notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

- 1 To answer another call while on the phone, press . This places the first call on hold. To switch back to the first caller, press  again.

NOTE

Call Waiting is a system dependent feature. Contact your service provider for details, if you don't have this feature.

ADJUSTING VOLUME

Adjusts the volume of the ringer, key beep and speaker.

- 1 Press  [MENU]    then select one of the following.




- **Ringer** : Controls the ringer volume.
- **Key Tone** : Controls the keypad tone.
- **Voice Call** : Controls the earpiece volume.
- **Speaker Phone** : Controls the speaker volume.

- 2 Adjust volume then press  to save it.

NOTE

- When you are on a voice call, the side up/down volume key will raise/lower the earpiece or headset volume respectively.
- To adjust master volume, press the side up/down key when phone is in idle mode.

ENTER LOCK MODE

- 1 To lock the phone, press and hold .
- 2 To unlock the phone, press  or  [UNLOCK], input your password.

DURING A CALL

To display menu options during a call, press [OPTIONS].

SEND TEXT MSG

To send a Text message (SMS) during a call.

1 Press [MENU] .

MUTE/UNMUTE

With mute activated, the caller cannot hear you or any sounds from your side but you can still hear them. The microphone is turned off.

1 Press [MENU] .

- To deactivate, press [MENU] . The microphone is turned back on.
- The phone will automatically become normal in Emergency Call or Callback mode.

SEND DTMF

Depending on your pager service, to transmit your phone number to a pager during a call:

1 Press [MENU] .

VOICE PRIVACY

When Voice Privacy is set to ON, the security for the voice call is increased with enhanced encryption.

1 Press [MENU] .

DURING A CALL

LOCATION

Enables the network to locate your current location through Global Positioning System (GPS). (Refer to page 77 for more details.)

1 Press [MENU] .

CONTACTS


To select a phone number in your internal Contact List.

1 Press [CONTACTS].


MAKING AN EMERGENCY CALL

911 IN LOCK MODE

911 call service is available even in the lock mode.

- 1 Enter "911" then press .
- 2 The call connects.
- 3 After the call ends, the phone maintains the emergency mode for 5 minutes.
 - When the call ends, the phone returns to the Lock Mode.

911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" then press .
- 2 The call connects.
- 3 After the call ends, the phone maintains the Emergency Mode for 5 minutes.
 - While the phone is in the emergency mode for 5 minutes, the phone can receive an incoming call from any available system. However, it can't make a call.



The 911 call is not recorded in the recent calls list.

Chapter 3

MEMORY FUNCTION

- STORING A PHONE NUMBER
- ENTERING LETTERS, NUMBERS & SYMBOLS

STORING A PHONE NUMBER

 
The phone book stores up to 300 entries.

- 1 Enter a phone number, press **OK** [SAVE] then choose "New Contact" or "Existing Contact". Press **OK** to select.
- 2 If "New Contact" is selected, the phone number will appear above a list. Press the Navigation Key left or right to choose the type of number you're adding, as indicated by the icon. Press **OK** to select. If "Existing Contact" is selected, your contact list is displayed. Choose the entry to add the phone number to, then press **OK**. You will then see the phone number listed with the entry. Press **OK** to select.
- 3 Enter a name, and press **OK**. Press the Navigation Key down to select other options (Mobile1.2, E-mail1.2, etc...). (You can change the input mode by pressing **[...]** [Abc]. Refer to page 31 for more details on entering letters, numbers, & symbols.)
- 4 To store the entry, press **[...]** [SAVE]. "New contact added!" or "Contact edited!" will be displayed.

ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will automatically be activated when you are prompted to enter letters and numbers. There are 4 available modes: Standard input mode (Abc), T9 input mode (T9Word), Numeric mode (NUM), and Symbol mode (Symbols).

The input mode indicator appears on the upper right of the display. To change the input mode, press **[...]** [Abc], then enter letters and numbers select one of the four mode.

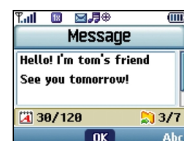

Input mode indicator
T9Word : T9 mode
Abc : Abc mode
NUM : Number mode
Symbols : Symbol mode

The following table list the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
[...] Abc	Press to change mode. [T9Word][Abc][NUM][Symbols]
[Next] Next	Press to view the next matching word if the highlighted word is not the word you intended.
[Space] Space	Press to accept a word and add a space.
[Caps Lock] Caps Lock	Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC] and [abc] indicate the standard text input. [T9Word], [T9WORD] and [T9word] indicate the predictive text input. Press and hold to change mode.
[Clear] Clear [CLR]	Press to delete a character to the left of the cursor.
[Save] OK	Store the letters and numbers you enter.

ENTERING LETTERS, NUMBERS & SYMBOLS

STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

1 Enter letters using the key pad as follows:

Key Pad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

For the symbols (. ! @ ? ! - , & : '), press repeatedly.

2 To insert a space, press . The cursor will automatically move to the next space.

3 Repeat until letters are entered.
There is a 16-letter limit.

4 To delete one digit at a time, press .
If you press and hold , it will delete a word or a whole number at a time.

5 To change from lowercase to uppercase, press to select ABC (all capital letters), abc (all lowercase letters), or Abc (capital letter on first letter of the word).

ENTERING LETTERS, NUMBERS & SYMBOLS

T9 INPUT MODE

The T9 input mode incorporates a built-in dictionary to determine a common word based on the characters you have typed. If the word is not what you want, you can scroll through the common words that are stored in the built-in dictionary.

1 To use the T9Word input mode, press the [Abc] and select T9Word.

2 Type the word using the digit key pad. Each time you type in a letter, the built-in dictionary determines a common word. Type all the letters until you are done with the word.

3 After typing the word, the built-in dictionary determines a common word that matches your entered characters. To view the next matching word, press .

4 When you see a matching word and you want to accept it, enter a space by pressing .



To enter "Fun fare" using the T9 input mode.

- Press [Abc] and select T9 mode. Press to choose between T9word (all lower case letters), T9WORD (all capital letters), or T9Word (first letter is capitalized.)

- Press and you will see "Fun" highlighted.
Press to accept it.

- Press and you will see "ease" highlighted.
Press to see the next matching word: press until you see "fare". To accept the matching word, press .

NUMERIC MODE

This mode allows you to enter the numbers according to your digit key pad.

1 Press [⋮] [Abc] and select "NUM".

2 To enter a number, press the digit key corresponding to the number.

SYMBOL MODE

This mode allows you to enter symbols that are not shown on the digit key.

1 Press [⋮] [Abc] and select "Symbols".

2 A list of symbols will be displayed. Use the Navigation Key to highlight the symbol you want, then press [OK] to accept it.

Press [⬅] [⌨] [➡].

or

Press [⌨] [⬅] [➡].



Chapter 4



MENU FUNCTION

- CONTACTS
- RECENT CALLS
- ACCESS APPS
- MEDIA GALLERY
- SETTINGS
- TOOLS
- CAMERA

CONTACTS









This phone can store up to 300 contacts. Each of which can be assigned to a group. The contacts can be retrieved by name, phone number or group.

FIND

Press  to look up a contact by name and make the call by simply pressing .


FIND BY NAME

This will list the contacts' name in alphabetical order, so you can locate it quickly.

- 1 Press  [MENU]    or .
- 2 The list of names in your phone book is displayed alphabetically.
- 3 Enter a name or character string or scroll through the list with the Navigation Key. If you need to change the input mode, press  [Abc].
- 4 The list jumps to the name with the letter(s) that you enter. You can highlight an entry and press  to edit it. Certain entries have more options when you press  [MENU]. These options are as follows:

- Contact has a mobile phone number, your options will be 1. Send Text Msg, 2. Send Photo Msg, 3. Prefix or 4. Erase.
- No mobile number is saved for the contact, your options will be 1. Prefix, 2. Erase.
- Only an email or web address is saved for the contact, your options will be 1. Send Text Msg, 2. Send Photo Msg or 3. Erase.
- If the entry is set to secret, you will be asked for your password.





 

(Refer to page 105 or page 106 for more details on "New Text Msg" & "New Photo Msg".)

- 5 After scrolling through the list and highlighting the contact, press  to make the call.

CONTACTS

FIND BY NUMBER

Use this to display the contacts in your phone in numerical order, so you can locate the contact quickly.

- 1 Press  [MENU]   .
- 2 The list of phone numbers saved in your phone book will be displayed in numerical order.
- 3 Enter a part of the phone number or scroll through the list with the Navigation Key. The name associated with that number will be displayed at the bottom of the screen.
- 4 The list of phone numbers matching what you entered is displayed. You can highlight an entry and press  to edit it. Certain entries have more options when you press  [MENU]. These options are as follows:

- Contact has a mobile phone number, your options will be 1. Send Text Msg, 2. Send Photo Msg, 3. Prefix or 4. Erase.
- No mobile number is saved for the contact, your options will be 1. Prefix, 2. Erase.
- Only an email or web address is saved for the contact, your options will be 1. Send Text Msg, 2. Send Photo Msg or 3. Erase.
- If the entry is set to secret, you will be asked for your password.

(Refer to page 105 or page 106 for more details on "New Text Msg" & "New Photo Msg".)

- 5 After scrolling through the list and highlighting the number, press  to make the call.

CONTACTS

ADD NEW

Use this to add new contacts to your phone book.

- 1 Press [MENU] .
- 2 The Contact screen appears. Enter the name and press . Scroll down with the Navigation Key to enter information for the other phone book fields.

● **PHONE BOOK FIELD :** Name/Mobile/Home/Office/Pager/
Fax/E-Mail/Wireless Addr./Group/Ringer/Msg.Ringer/
Graphic/Memo/Set Secret.

Refer to page 31 for more details on entering letters, numbers & symbols.

- 3.1 To save the entry, press [SAVE].
- 3.2 To return to the previous page, press .

GROUP

Group allows you to organize your contacts in categories called groups. Existing groups include Personal, Business, Etc. and All. A maximum of seven groups is allowed.

ADD NEW GROUP

- 1 To add a new group, press [MENU] .
- 2 Press [MENU] to select "Add Group".
- 3 Input a new group name.
- 4 Press to save it.

NOTE

To add a contact to a group, select the name of the group from the Group field when you add or edit the phone book entry.

CONTACTS

CHANGE GROUP NAME

- 1 Press [MENU] .
- 2 Select an existing group name.
- 3 Press [MENU] and select "Rename".
- 4 Input a new group name.
- 5 Press to save it.

NOTE

The default group names (All, Personal, Business, Etc.) cannot be changed.

ERASE GROUP

- 1 Press [MENU] .
- 2 Select an existing group name.
- 3 Press [ERASE] to delete it.
- 4 Press to erase it.

NOTE

- The default group names (All, Personal, Business, Etc.) cannot be erased.
- When executing erase group, the saved entries are moved to the Etc. group.

CONTACTS

SPEED DIAL

Speed dial allows you to quickly make a call by simply pressing one or two digit numbers that are assigned to the contact in your phone. In the idle mode, to place a speed dial call, press and hold the location number on the key pad. For a 2-digit location number, press the first number, and then press and hold the second number.

- 1 Press [MENU] .
- 2 To assign a contact to a speed dial, first select an "Unassigned" location number, then press [SET].
 - If a phone number is already assigned to the location, press [ERASE] and to delete.
- 3 The contact list appears. Use the Navigation Key to select a contact and then press .
 - If the entry is set to secret, you will be asked for your password.
- 4 "Speed Dial # X edited" will be displayed and your contact is assigned to a speed dial #.

CONTACTS

MSG. GROUP

Message Group allows you to create a group of up to 10 phone numbers or contacts. It is useful when you want to send a message to more than one person at a time. A maximum of five groups is allowed.

ADD NEW MSG. GROUP

- 1 To add a new group, press [MENU] .
- 2 Press [MENU] and select "Add Group".
- 3 Input a new group name.
- 4 Press to save it.

NOTE To add contacts to a Msg group, press [MENU] , select the Msg group, then press . Choose an "Unassigned" location for each contact, then press [SET]. Highlight from the list of contacts and then press . You can assign up to 10 contacts for each group.

CHANGE MSG. GROUP NAME

- 1 Press [MENU] .
- 2 Select an existing group.
- 3 Press [MENU] to select "Rename".
- 4 Input a new group name.
- 5 Press to save it.

SEND TEXT MSG. GROUP

This function allows you to send a text message to a group at a time, making it convenient and efficient to send a message to multiple people.

- 1 Press [MENU] .
- 2 Scroll to a group name using the Navigation Key.
- 3 Press [MENU] and select "Send Text Msg".
- 4 Scroll down to select the Message field.
Enter the message you want to send and press .
- 5 5.1. To send the text message, press [MENU], select "Send", then press .
- 5.2. To save the text message, press [MENU], select "Save to Outbox", then press .

Refer to page 105 for more details on "New Text Msg".

SEND PHOTO MSG. GROUP

This function allows you to send a photo message to a group at a time, making it convenient and efficient to send a photo message to multiple people.

- 1 Press [MENU] .
 - 2 Scroll to a group name using the Navigation Key.
 - 3 Press [MENU] and select "Send Photo Msg".
 - 4 Scroll down to Input a "Message", "Subject".
Press when done.
 - 5 To send the picture message, press [MENU], select "Send", then press .
- Refer to page 106 for more details on "New Photo Msg".

ERASE MSG. GROUP

Erasing the Message Group will only remove the group from your list. Your contacts will still be saved.

- 1 Press [MENU] .
- 2 Select an existing group name.
- 3 Press [ERASE] to delete it.
- 4 Press to erase it.

CONTACTS

MY PHONE

To display your phone number and service provider:

1 Press [MENU] .

2 To return to the previous page, press .

RECENT CALLS

Recent Calls menu shows activities of your calls.

They include: All Calls, Missed Calls, Received Calls, Dialed Calls, Call Timers and Data Calls. Press [MENU] .

ALL CALLS

All Calls displays information about the most recent missed, received and dialed calls. It can store a maximum of 60 most recent calls.

1 Press [MENU] .



- If the number is already stored in your phone book, only the name appears.
- If the number is not stored, only the phone number appears.

2 To view the detail of each call, highlight the call, and press .



Call details include type of call, date, time and phone number.

3 Press [ERASE] to delete it or press [MENU] to see the options below:

- Save: Store the phone number in your phone book.
- Prefix: Add a prefix like an area code or international code to the number.
- Send Text Msg: Automatically insert the number for text messaging.
- Send Photo Msg: Automatically insert the phone number for photo messaging.
- Erase All: Erase all recent calls history.



After the 60 received, dialed or missed calls, the oldest call will automatically be erased from the history.

RECENT CALLS

MISSED CALLS

Missed Calls displays information about the 20 most recently calls that you did not answered. You can place a call to a recently missed call number by simply pressing .

1 Press [MENU] .



- If the number is already stored in your phone book, only the name appears.
- If the number is not stored, only the phone number appears.

2 To view details about each Missed Call, highlight it, and press .



Call details include date, time and phone number.

3 Press [ERASE] to delete it or press [MENU] to see the options below:

- Save: Store the phone number in your phone book.
- Prefix: Add a prefix like an area code or international code to the number.
- Send Text Msg: Automatically insert the number for text messaging.
- Send Photo Msg: Automatically insert the phone number for photo messaging.
- Erase All: Erase all missed calls history.



After 20 missed calls, the oldest call will automatically be erased from the history.

RECENT CALLS

RECEIVED CALLS

Received Calls displays information about the 20 most recently answered calls. You can place a call to a recently received call by simply pressing .

1 Press [MENU] .



- If the number is already stored in your phone book, only the name appears.
- If the number is not stored, only the phone number appears.

2 To view details about each incoming call, highlight it, and press .



Call details include date, time and phone number.

3 Press [ERASE] to delete it or press [MENU] to see the options below:

- Save: Store the phone number in your phone book.
- Prefix: Add a prefix like an area code or international code to the number.
- Send Text Msg: Automatically insert the number for text messaging.
- Send Photo Msg: Automatically insert the phone number for photo messaging.
- Erase All: Erase all received calls history.



After 20 received calls, the oldest call will automatically be erased from the history.

RECENT CALLS

DIALED CALLS

Dialed Calls displays information about the 20 most recently dialed numbers. You can place a call to a recently dialed call by simply pressing .

1 Press [MENU] .



- If the number is already stored in your phone book, only the name appears.
- If the number is not stored, only the phone number appears.

2 To view details about each dialed call, highlight it, and press .



Call details include type of call, date, time and phone number.

3 Press [ERASE] to delete it or press [MENU] to see the options below:

- Save: Store the phone number in your phone book.
- Prefix: Add a prefix like an area code or international code to the number.
- Send Text Msg: Automatically insert the number for text messaging.
- Send Photo Msg: Automatically insert the phone number for photo messaging.
- Erase All: Erase all dialed calls history.



After 20 dialed calls, the oldest call will automatically be erased from the history.

RECENT CALLS

CALL TIMERS

Call Timers allows you to check the usage time. The five timers include Last Call, All Calls, Home Calls, Roam Calls, and Cumulative Calls.

LAST CALL

This shows the usage time of the last call.

1 Press [MENU] .

2 To return to the previous page, press .

ALL CALLS

This shows the usage time of all incoming and outgoing calls, excluding web access calls.

1 Press [MENU] .

2 Select the following items:

- Voice Call
- Data/Fax Call

3 To return to the previous page, press .

HOME CALLS

This shows the usage time of all calls made within the Home area. Home Calls are calls within your system coverage area that exclude roaming.

1 Press [MENU] .

2 Select the following items:

- Voice Call
- Data/Fax Call

3 To reset the timer, press [RESET].
To return to the previous page, press .

RECENT CALLS

ROAM CALLS

This shows the usage time of roaming calls. Roaming calls are calls outside of your system coverage area that may require additional charge.

- 1 Press [MENU] .
- 2 Select the following items:
 - Voice Call
 - Data/Fax Call
- 3 To reset the timer, press [RESET].
To return to the previous page, press .

CUMULATIVE CALLS

This shows the usage time of all incoming and outgoing calls, excluding web access calls.

- 1 Press [MENU] .
- 2 Select the following items:
 - Voice Call
 - Data/Fax Call
- 3 To reset the timer, press [RESET].
To return to the previous page, press .

RECENT CALLS

DATA CALLS

Data Calls allows you to check the log of all kilobyte data transmissions.

RECEIVED

To show the received kilobyte usage on a user definable interval:

- 1 Press [MENU] .
- 2 To reset the counter, press [RESET].
To return to the previous page, press .

TRANSMITTED

To show the transmitted kilobyte usage on a user definable interval:

- 1 Press [MENU] .
- 2 To reset the counter, press [RESET].
To return to the previous page, press .

TOTAL

To show the received or transmitted kilobyte usage on a user definable interval:

- 1 Press [MENU] .
- 2 To return to the previous page, press .

AXCESS APPS

Your phone provides "Access Apps", a unique feature that enables you to download melody ringers, wallpapers, games, and more from your network to your phone. Contact your service provider for the availability of these services.

START AXCESS APPS

- 1 To launch "Access Apps" from the standby mode, press [MENU] or .
- 2 The name of the icon will appear at the bottom of the screen. Select the "Access Shop " by pressing the Navigation Key left or right.
- 3 To start the application, press .
- 4 To end the application, press . The phone will return to the standby mode or the previous screen status.

DOWNLOADING APPLICATIONS

- 1 Press [MENU] or .
- 2 Select "Access Shop ", then press .
- 3 Select "Catalog", then press .
- 4 The phone will access your service provider's server. Follow the prompt to download applications.

- To select an option, scroll to the option by using the Navigation Key, then press .
- When a prompt appears, press to proceed or to cancel.

AXCESS APPS

DOWNLOADING MELODIES/WALLPAPERS

Before downloading melody ringers and wallpapers, you need to download the dedicated downloader. Contact your service provider for details.

APPLYING MELODIES/WALLPAPERS

Downloaded melody ringers apply to several functions including the incoming call alert, new text message alert, alarm clock and scheduler alarm. See Ringer Type on page 58.

Downloaded wallpapers apply to the standby mode. See Wallpaper on page 63.

CHECKING MEMORY IN THE DATA FOLDER

Downloaded melody ringers, wallpapers and applications are saved to the data folder in your phone.

- 1 Press [MENU] or .
- 2 Select "Settings ", then press .
- 3 Select "Manage Apps", then press [SYSTEM INFO]. The memory status will be displayed.
- 4 To exit, press .

ERASING AN APPLICATION

- 1 Press [MENU] or .
- 2 Select "Settings" , then press .
- 3 Select "Manage Apps", then press .
The memory status will be displayed.
- 4 Select the application to be erased then press .
- 5 Select "Remove", then press to remove it.

IMAGES

GRAPHICS

This menu shows the list of downloaded still images.

- 1 Press [MENU] .
 - Press [MENU] to select 1. Rename, 2. Delete, 3. Delete All, 4. Information
- 2 Scroll through the downloaded images to display the picture you want to send, then press [SEND].
- 3 To write your picture message, see "New Photo Msg" on page 106.
- 4 To send the photo message, press [MENU], select "Send", then press [OK].

ANIMATIONS

This menu shows the list of downloaded or saved images.

- 1 Press [MENU] .
 - Press [MENU] to select 1. Rename, 2. Delete, 3. Delete All, 4. Information
- 2 Scroll through the downloaded images to display the picture you want to send, then press [SEND].
- 3 To write your picture message, see "New Photo Msg" on page 106.
- 4 To send the photo message, press [MENU], select "Send", then press [OK].

MEDIA GALLERY

PHOTOS

This menu shows the list of photos that have been taken with the camera.

1 Press [MENU] .

- Press [MENU] to select 1. Rename, 2. Delete, 3. Delete All, 4. Information

2 Scroll through the captured pictures to display the picture you want to send, then press [SEND].

3 The New Photo Msg screen will appear. Enter the information in all the necessary fields. See "New Photo Msg" on page 106.

4 To send the photo message, press [MENU], select "Send", then press [OK].

TONES

This menu shows the list of downloaded ringtones and saved voice memos. Sending tones or voice memos is done through the New Photo Msg screen.

1 Press [MENU] .

2 Scroll to the saved voice memo or downloaded ringtone you want to send then press [SEND].

3 The New Photo Msg screen will appear. Enter the information in all the necessary fields. See "New Photo Msg" on page 106.

4 To send the photo message, press [MENU], select "Send", then press [OK].

MEDIA GALLERY

SHUFFLE

WALLPAPER

This option would pull files from the Wallpaper Shuffle Menu, and randomly display wallpapers.

1 Press [MENU] .

- Press [MENU] to select 1. Delete, 2. Delete All, 3. Information

RING TONES

Option to set incoming calls to SHUFFLE TONES. Option would pull files from the Ringtone Shuffle Menu, and randomly play tones.

1 Press [MENU] .

- Press [MENU] to select 1. Delete, 2. Delete All, 3. Information

SETTINGS

Customizes your phone and optimizes performance through a variety of settings.

SOUNDS

Sets Ringer Type, Volume, Alert, Roam Ringer, Tone Length and Etiquette.

RINGER TYPE

To select a ringer type for incoming calls:

RINGER

1 Press [MENU] .

2 Select your desired ringer type.

- Left or Right key : Select "Ring Tones", "Music Bells" or "Downloads".
- Up or Down key : Select "Ringer".
- Downloads : Downloaded ringer types and familiar music.

3 Select one of the available ring types.
To confirm, press [SELECT].

MESSAGES

To select a ringer type for receiving messages:

1 Press [MENU] .

2 Press the Navigation Key up or down to select "Tone 1, 2, 3, 4, 5, 6, 7, 8, 9, 10".

3 To confirm, press [SELECT].

VOICE MAIL

To select a ringer type for receiving voice mail:

1 Press [MENU] .

2 Press the Navigation Key up or down to select "Tone 1, 2, 3, 4, 5, 6, 7, 8, 9, 10".

3 To confirm, press [SELECT].

SETTINGS

VOLUME

Controls the Ringer, Key Tone, Voice Call and Speakerphone volume.

RINGER

Controls the Ringer volume and alerts you to incoming calls in the modes listed in the gray box below.

1 Press [MENU] .

2 Select one of the following options by pressing the Navigation Key to the right.

- Silent : Mute the ringer, press (Min).
- Ringer Off
- Vibrate On
- Ringer Mode : Up & Down (Level 1-5)
- High & Vib : The ringer sounds after vibration, press (Max).

3 To confirm, press .

KEY TONE

To adjust key pad tone:

1 Press [MENU] .

2 Adjust the key pad tone with the Navigation Key.

- Off (Min-)
- Level 1 - 5 (level 5, Max-)

3 To activate, press .

VOICE CALL

To adjust earpiece volume (Lets you adjust the ringer volume in standby mode with side volume key):

1 Press [MENU] .

2 Adjust the earpiece volume with the Navigation Key.

- Level 1 - 5 (Min- , Max-)

3 To activate, press .

SETTINGS

SPEAKER PHONE

To adjust speakerphone volume:

- 1 Press [MENU] .
- 2 Adjusts the speakerphone volume using the Navigation Key.
 , Max-)
- 3 To activate, press .

ALERT

When set, this setting alerts you to the following handset changes:

MINUTE

Sounds an alert every minute during a call.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key, then press to activate it.

ROAM

Sounds an alert when leaving a service area and entering a roaming service area.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key, then press to activate it.

CONNECT

Notifies you that a call has been successfully placed.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key, then press to activate it.

SETTINGS

FADE

Sounds an alert when entering an area where calls cannot be made due to weak signal strength.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key, then press to activate it.

ON/OFF TONES

Allows you to activate/deactivate the power on/off tones.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key, then press to activate it.

ROAM RINGER

Sounds a different ringer when you are in a roaming service area.

- 1 Press [MENU] .
- 2 Select "Normal" or "Distinctive" with the Navigation Key, then press to activate it.

- Normal : Sounds the same ringer type as used in Home area.
- Distinctive : Sounds a different ringer type.

SETTINGS

TONE LENGTH

To adjust tone length:

- 1 Press [MENU] .
- 2 Select "Normal" or "Long" with the Navigation Key, then press to activate it.

ETIQUETTE

To place the phone in Etiquette Mode so all phone sounds are muted:

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key, then press to activate it.



Shortcut:

From standby mode, press and hold to turn Etiquette Mode On/Off.

SETTINGS

DISPLAY

Allows you to customize the display.

GRAPHICS

To select an LCD display:

WALLPAPER

- 1 Press [MENU] .
- 2 Select Default to choose a pre-installed display or scroll through Downloads or Photo # to choose a display you have downloaded to your phone.
- 3 Press [SELECT] to activate it.

POWER ON

- 1 Press [MENU] .
- 2 Select "ALLTEL" with the Navigation Key.
- 3 Press [SELECT] to activate it.

POWER OFF

- 1 Press [MENU] .
- 2 Select "ALLTEL" with the Navigation Key.
- 3 Press [SELECT] to activate it.

SETTINGS

RECEIVED

- 1 Press [MENU] .
- 2 Select "Default" with the Navigation Key.
- 3 Press [SELECT] to activate it.

DIALED

- 1 Press [MENU] .
- 2 Select "Default" with the Navigation Key.
- 3 Press [SELECT] to activate it.

SCREEN SAVER

Set the time for the Screen Saver, then select the images (default or downloaded from Cricket Clicks), then the image will be displayed on the LCD.

- 1 Press [MENU] .
- 2 Select "Time Setting" or "Screen Saver" with the Navigation Key.
 - Time Setting : Off, 5 Secs, 10 Secs, 20 Secs, 30 Secs.
 - Screen Saver : Select picture image.(Photo/Multimedia/Images).
By pressing [MENU], the user can choose from the following:
 1. **Erase**: To erase pictures saved in the current album.
 2. **Erase All**: To erase all pictures saved in the current album.
 3. **Change Title**: To edit the title of a picture file.
- 3 To activate, press [SELECT].

SETTINGS

SUB SCREEN

- 1 Press [MENU] .
- 2 Select "Digital" or "Analog" with the Navigation Key.
- 3 To activate, press .

GREETING MESSAGE

To input a personal greeting:

- 1 Press [MENU] .
- 2 The message field will be highlighted.
Press the Navigation Key left or right to choose between on and off. Press the Navigation Key down to move to the next field, font color.
Press the Navigation Key left or right to choose a color. Repeat for both fields.
Press the Navigation Key down to entry message.
Enter your greeting.

- Message : On/Off.
 - Font Color: Red, Orange, Green, Blue, Violet, Black, White.
 - Entry Message : Enter message (Default-ALLTEL).
- 3 To save, press [SAVE].

SETTINGS

CONTRAST

To adjust the display contrast:

MAIN LCD/SUB LCD

- 1 Press [MENU] .
- 2 Select "Main LCD" or "Sub LCD", then select one of the following options with the Navigation Key.

- Main LCD : Level 1~5.
- Sub LCD : Level 1~5.

- 3 To save, press .

BACKLIGHT

Backlights the display and key pad for easy viewing in dark places.

LCD/KEY PAD

- 1 Press [MENU] .
- 2 Select "LCD" or "Key Pad", then select one of the following options with the Navigation Key.

- LCD : 5 Secs/15 Secs/30 Secs/60 Secs/Always On.
- Key Pad : 5 Secs/15 Secs/30 Secs/60 Secs/Always On/Always Off.

- 3 To save, press .

SETTINGS

DATA SERVICE

CONNECTION

In Connection, you can set your phone to Voice Call, Data Only or Fax Only. This function works with a USB data cable that connects your phone to your PC. (See NOTE below.)

- 1 Press [MENU] .
- 2 Select one of the following connection modes with the Navigation Key.

- Voice Call : To receive a voice call.
- Data Only : To receive data when connected to PC.
- Fax Only : To function as a fax when connected to PC.

- 3 Press to activate.

NOTE This function is available only when the phone is connected to a data cable. (The USB data cable is not supplied in the package. Please purchase near store).

WAP/BREW

This is a setup for the data service that you preferred. When "Auto" is set, "1X Only" or "QNC Only" is automatically selected, depending on data service the network provides. "1X Only" uses packet data technology, while "QNC Only" uses circuit switched data technology.

- 1 Press [MENU] .
- 2 Select "Auto", "1x Only" or "QNC Only" with the Navigation Key.
- 3 To save it, press .

SECURITY

Prevents unauthorized use of your phone. The following settings can be restricted:

PHONE LOCK

Prevents the phone from being used without entering the password first.

1 Press [MENU] , enter your password.



The default password is the last 4 digits of your phone number.

2 Press , then select "Lock Now", "Lock On Power Up" or "Unlock".

- Lock Now : Lock the phone now.
- Lock On Power Up : Not locked, but it is automatically locked when power is recycled.
- Unlock : Do not lock the phone.

3 To activate, press .

RESTRICT

When you attempt to make a restricted call, "This phone is restricted" appears on the screen.

DIALED

Blocks all dialed calls – except emergency calls – but allows an incoming call to be placed.

1 Press [MENU] , enter your password.

2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows a dialed call.
- Restrict : Restricts a dialed call.

3 To activate, press .

RECENT CALLS

Blocks access to Recent Call List.

1 Press [MENU] , enter your password.

2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows a recent call.
- Restrict : Restricts a recent call.

3 To activate, press .

CAMERA

Restricts access to camera mode.

1 Press [MENU] , enter your password.

2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows access to the camera.
- Restrict : Restricts access to the camera.

3 To activate, press .

DATA CALL

Restricts a data call from being placed.

1 Press [MENU] , enter your password.

2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows a data call.
- Restrict : Restricts a data call.

3 To activate, press .

SETTINGS

900#S

Restricts calling 900 dial service numbers.

- 1 Press [MENU] , enter your password.
- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.
 - Allow : Allows calls to a 900-dial service.
 - Restrict : Restricts calls to a 900-dial service.
- 3 To activate, press .

LONG DISTANCE

Restricts calling long distance numbers – the phone is limited to calling numbers within the area.

- 1 Press [MENU] , enter your password.
- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.
 - Allow : Allows a long distance call.
 - Restrict : Restricts a long distance call.
- 3 To activate, press .

SETTINGS

CHANGE CODE

Changes your 4-digit password.

- 1 Press [MENU] , enter your password.
- 2 Press .
- 3 Enter a new password, then press .
- 4 Enter the new password again, then press .

SPECIAL #'S

Stores 3 phone numbers that can be called even in the lock mode.

- 1 Press [MENU] , enter your password.
- 2 Press , then select a location with the Navigation Key.
- 3 Press [SET] and input a phone number, press again to save.

ERASE ALL

Clears all contacts, downloads, and photo gallery entries from your phone.

- 1 Press [MENU] , enter your password.
- 2 Press .
- 3 Press [CHECK] to check "Contacts", "Downloads" or "Photo Gallery", then press to erase all the items in those categories.

RESET PHONE

Resets phone to default settings.

- 1 Press [MENU] , enter your password.
- 2 Press .
- 3 You will see "Reset Phone ! this will reset to default settings." on the display.
- 4 To reset the phone, press .

1X PASSWORD

You can set up your Password Authentication Protocol (PAP) by entering your PAP User ID and PAP Password. This is used for accessing the data service by your phone service provider.

PAP USER ID

To change your User ID:

- 1 Press [MENU] , enter your password.
- 2 Press for "PAP User ID".
Your User ID appears in the Editor screen.
- 3 To save, press [STORE].

PAP PASSWORD

To change your PASSWORD:

- 1 Press [MENU] , enter your password.
- 2 Press for "PAP Password".
Your password appears in the Editor screen.
- 3 To save, press [STORE].

RESTRICTIVE DIALING

The ability to restrict outgoing calls from the handset to only the phonebook entries - Handsets need ability to restrict outgoing calls to a created phone list, access of phone list to be controlled by access code. The ability to restrict incoming calls to the phonebook entries - Handsets need ability to restrict incoming calls to a created phone list, access of phone list to be controlled by access code. Set this function to ON when you want to restrict all Outgoing calls.

SET ON/OFF

- 1 Press [MENU] , enter your restrictive code.



The default password is "000000".

- 2 Press .
- 3 Select "On" or "Off" with the Navigation Key.
- 4 To activate, press .

CHANGE SPECIAL CODE

Changes your 6-digit restrictive code.

- 1 Press [MENU] , enter your restrictive code.



The default password is "000000".

- 2 Press .
- 3 Enter a new restrictive code, then press .
- 4 Enter the new restrictive code again, then press .

OTHERS

ANSWER OPTIONS

CALL ANSWER

To select an answer mode:

1 Press [MENU] .

2 Select "Any Key" or "Send Key" with the Navigation Key.

- Any Key : Press any key to answer an incoming call except , , and .
- Send Key : Press only to answer a call.

3 To activate, press .

ACTIVE FLIP

To select active flip answer mode.

1 Press [MENU] .

2 Select "Off" or "On" with the Navigation Key.

3 To activate, press .

- When Active Flip On is selected, an incoming phone call can be answered simply by opening the phone.
- When Active Flip Off is selected, you will need to open the phone and follow the Answer mode you have selected.

AUTO ANSWER

Automatically answers a call after a preset amount of time. Auto Answer only works when the phone is open.

1 Press [MENU] .

2 Select one of the following with the Navigation Key.

Off/5 Secs/10 Secs/18 Secs.



This function will not be active when you select Vibrate, Silent, Etiquette or Ringer after Vib as a ringer mode.

3 To activate, press .

AUTO RETRY

Automatically redials a call up to 5 times after a set time interval.

1 Press [MENU] .

2 Retry time to field is shown. Press the Navigation Key left or right to choose the amount of time. (Off, 3 Secs, 5 Secs, 7 Secs, 10 Secs.)

3 When a time is chosen for retry time, the repeat field is shown. Press the Navigation Key down to highlight the repeat field. Press the Navigation Key left or right to choose the amount of repeats. (1 Time, 3 Times, 5 Times).

4 To activate, press .

SETTINGS

LANGUAGE

Selects the language in which letters are displayed on screen.

- 1 Press [MENU] .
- 2 Select either "English" or "Spanish" with the Navigation Key.
- 3 To activate, press .

VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

- 1 Press [MENU] .
 - 2 Select "Standard" or "Enhanced" with the Navigation Key.
 - 3 To activate, press .
- "Enhanced" : Makes it more difficult to wire tap.

SETTINGS

TTY MODE

Your phone is able to operate with a TTY (Teletypewriter) device in digital mode. This feature is system dependent and may not be available in all areas.

- 1 Press [MENU] .
- 2 Select one of the following options (TTY Off / TTY+TALK / TTY+HEAR / TTY Full) with the Navigation Key, then press .

LOCATION

To determine whether or not the network system can detect your position:

- 1 Press [MENU] .
- 2 Select "911 Only" or "Location On" with the Navigation Key.
 - 911 Only : Your location will be hidden from network & application except 911.
 - Location On : Your location is now available to the network.
- 3 To activate, press .

SETTINGS

SYSTEM

SET MODE

Selects the Preferred System.

- 1 Press [MENU] .
- 2 Select one of the following options (Automatic B /Automatic A /Home Only) with the Navigation Key, then press .

- Automatic B : Scans the radio channels based on the Automatic B setting.
- Automatic A : Scans the radio channels based on the Automatic A setting.
- Home Only : Only within your home area or home affiliated area.

NAM SETTING

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

AUTO NAM

Automatically switches phone to proper NAM when you have multiple NAM registrations.

- 1 Press [MENU] .
- 2 Select "No" or "Yes", then press to activate it.

SETTINGS

CHANGE NAM

Changes the NAM used by the phone when you have multiple registrations.

- 1 Press [MENU] .
- 2 Select "NAM1-ALLTEL" or "NAM2-ALLTEL", then press to activate it.

PRL ID

Displays the phone's PRL (Preferred Roaming List).

- 1 Press [MENU] .
- 2 To return to the previous page, press .

ERI BANNER

This will allow for the display of ERI text on the screen when the Device acquires ANY system other than the home system.

- 1 Press [MENU] .
- 2 Select "Off" or "On", then press to activate it.

SETTINGS

PHONE INFO

Displays the version of your phone:

S/W VERSION

- 1 Press [MENU] .
- 2 The software version appears.
- 3 Press .

H/W VERSION

- 1 Press [MENU] .
- 2 The hardware version appears.
- 3 Press .

AXCESS VERSION

- 1 Press [MENU] .
- 2 The "AXCESS" software version appears.
- 3 Press .

SETTINGS

AIRPLANE MODE

When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. You may still use the phone's other features, such as Notepad, Voice Memos, etc., while you are in Airplane Mode.

- 1 Press [MENU] .
- 2 Read the message, then press .
- 3 Select "Off" or "On", then press to activate it.



While in Airplane Mode, your phone's standby screen will display "Airplane Mode" and the Time/Date disappears.

SCHEDULE

Sets a plan and reminds you of that plan.

ADD NEW PLAN

- 1 Press [MENU] .
- 2 Use the Navigation Key to choose a date in the calendar, then press .
- 3 The date field is highlighted. Press the Navigation Key down to set the other options.

DATE

Use the keypad to change or enter the date then press .

TIME

Use the keypad to set a time and when highlighted, press to select "AM" or "PM", then press .

PLAN

Use the keypad to input a plan message then press .

SETTING

Select an alert time interval option (On Time, 10 Min Before, 30 Min Before, 1 Hour Before, No Alarm) by pressing the Navigation Key left or right.

RINGER

To set a Ringer, press [MENU], then select "Change" or "Default" using the Navigation Key. To save it press [SELECT].

- Change : Choose a ringer type from the list.
- Default : To set default ringer type.

- 4 Press [SAVE] to save it or [CLR] to return to the calendar.
- 5 The date of the plan will be marked on your calendar.

VIEW PLAN

- 1 To view the Event List, press [MENU] .
- 2 Move the Navigation Key to choose an event, then press or [ERASE]. Press [MENU], then select "Erase All" using the Navigation Key. "Erase all plans?" will be displayed. Press to delete.

ALARM

You can set up to 3 alarms.

- 1 To display alarm entries, press [MENU] .
- 2 Select one of the entries using the Navigation Key.
To set a new alarm, choose alarm 1, 2 or 3.
To edit an existing alarm, select that alarm.
Press .
- 3 The Setting field will be highlighted. Press the Navigation Key down to select alarm options.

SETTING

Use the Navigation Key to select a setting for the alarm (Once, Daily, Weekly, Monthly, Off).

DATE

Use the keypad to change or enter the date for the alarm then press .

If Weekly is chosen for the setting, date field becomes a day of the week.

- Once: Select a single date for the alarm.
- Daily: Select alarm for same time each day.
- Weekly: Select "Monday", "Tuesday", "Wednesday", "Thursday", "Friday", "Saturday", "Sunday".
- Monthly: Select day 1 through 31.
- Off

TIME

Use the keypad to set a time for the event and the to select "AM" or "PM" then press .

SNOOZE SETTING

Use the Navigation Key to select a Snooze setting (Off, 1 time after 5 min, 1 time after 10 min, 3 times by 5 min).

RINGER

To set a Ringer, press [MENU], then select "Change" or "Default" using the Navigation Key. To save it press [SELECT].

- Change : To choose a ringer type from the list.
- Default : To set default ringer type.

PLAN

Using the keypad, input an alarm message then press .

- 4 To save an alarm setting press [SAVE].

MEMO PAD

Your phone includes an internal memo pad that can be used to compose and store reminders and notes.

ADD MEMO

To compose a memo (there is an 80-letter limit):

- 1 Press [MENU] .
- 2 Input a new text memo.
(Refer to page 31 for more details on entering letters, numbers & symbols.)
- 3 Press to save memo.

VIEW MEMO

To view a saved memo:

- 1.1. Press [MENU] .
- 1.2. To erase a memo, press [ERASE].
- 1.3. To add a new memo, press [MENU] "New Memo".
- 1.4. To erase all memos, press [MENU] "Erase All".
- 2 The list of all memos, in saved order, is displayed. Select a memo, then press .
- 3 The selected memo will appear. To edit it, press [MENU], select "Edit" and input a new text memo, then press to save edit memo.

SETTINGS

To select memo pad background image:

- 1 Press [MENU] .
- 2 Select (Paper/Pattern/Sea/Sky/Flower) by pressing Navigation Key left or right, then press .

CALCULATOR

To access the calculator:

- 1 Press [MENU] .
- 2 Follow the instructions below to calculate $8*6 \div 4 - 2.5$

Press 8.
Press the Navigation Key to the right.
Press 6.
Press the Navigation Key to the left.
Press 4.
Press the Navigation Key down.
Press 2 then press to input (.).
Press 5.
Then press and you will see the answer.



- 3 To reset, press [RESET].

WORLD CLOCK

To display the time and date in pre-programmed cities:

- 1 Press [MENU] .
- 2 Select a city with the Navigation Key.
- 3 The world map appears with the city, its date and time.

● Use the Navigation Key to select another city.



As the daylight saving time is not applied, it may be different from the actual time during DST.

- 4 To return to the previous page, press .

STOP WATCH

Simultaneously times up to six different events. To operate the stop watch:

- 1 Press [MENU] .
- 2 To measure a time period.
 1. To start the stop watch, press [START].
 2. To pause it, press [STOP].
 3. To resume it or [RESET] to return to the previous page, press [EXIT].
- 3 To time up to six events at once:
 1. To start, press [START].
 2. To stop a time period and continue measuring another one, press [CONT].
 3. To stop the second and continue measuring a third one, press [CONT].
 4. To measure up to six time periods, repeat the above steps.
 5. To stop the stop watch, press [STOP].
 6. To review the results, press [VIEW].
 7. To return to the stop watch, press .
 8. To reset it, press [RESET].

TAKE PHOTO

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens and pressing a button. You can activate the Camera Mode and take pictures when the phone is open.

TAKING A PICTURE THROUGH THE MENU

- 1 Press [MENU] or press .
- 2 Point the camera lens at your subject.
You can check the picture framing through the main display screen.
- 3 Press [OK] or the side camera button to take the picture.
- 4 To save the picture, press [SAVE]. Input a picture title, then press . To go back to idle mode without saving the picture, press . To send the picture to someone, press [SEND].

- You cannot place or receive calls while in Camera Mode. All incoming voice calls will be forwarded to voicemail.

TAKING A PICTURE IN IDLE MODE

- 1 Press the Side Camera button or press and hold to activate Camera Mode.
- 2 Point the camera lens at your subject.
You can check the picture framing through the main display screen.
- 3 Press the side camera button to take the picture.
- 4 To save the picture, press [SAVE]. Input a picture title, then press . To go back to idle mode without saving the picture, press . To send the picture to someone, press [SEND].

CAMERA MODE OPTIONS

When the phone is open and in Camera Mode, several user options are available.

GALLERY

Press [GALLERY] to enter Review Mode. From there you can view the captured pictures, view a running count of stored pictures and more.

RESOLUTION

Press the Navigation Key up or down to adjust the picture size from High (640x480 pixels) to Med (320x240 pixels) to Low (160x120 pixels). The current picture size appears at the top left side of the display screen.

ZOOM

Press the Navigation Key left or right to change the magnification. (Zoom to 1x, 2x or 4x magnification in Low Resolution and 1X and 2X in Medium Resolution.)

UNDER [MENU]

SUB LCD

The sub LCD will show a representation of the picture to be taken. Use the sub LCD to help frame yourself for a self portrait.

FLASH

To activate the flash function. (Off / On this shot / Always On)

SELF TIMER

To activate the camera's timer function. (Off / 5 Secs / 10 Secs)

IMAGE CONTROLS

To select an option from the following. (Brightness / Image Effect / Contrast / Quality)

SHUTTER SOUND

To select a shutter sound. (Off / Shutter 1 / Shutter 2 / Shutter 3 / Say "Cheese")

PHOTO GALLERY

Your phone enters Review Mode after taking a picture.

1 Press [MENU] or .

2 Press to select a picture.

- In Review Mode you can view all the pictures you have taken, store selected images in your phone, send pictures to the Online Album, delete images and access additional picture options.
- Press [MENU] to display the following options :
 1. **Thumbnail** : To switch the display from full-screen to thumbnail view.
 2. **Edit Title** : Edit the picture's title.
 3. **Send Photo** : Upload the picture to a message.
 4. **Assign Picture** : Assigns the selected photo to display for specific tasks (Wallpaper/Screen Saver/Picture Caller ID/Incoming Call).
 5. **Erase** : Erase the current picture from your phone.
 6. **View Lists** : Displays all pictures.
 7. **Photo Info** : Displays information on the selected picture, such as title, date/time, size, etc.
- Press [CAM] to return to Camera mode to take another picture.

PHOTO MESSAGE

Once you've taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. To send a picture to a recipient's email address or to their wireless phone:

1 Press [MENU] or .

2 Press for "New Photo" or for a "Saved Photo". If you are looking for a saved photo, scroll through the captured pictures to select the picture you want to send.

3 Highlight the picture, then press .

4 Under "Send To", enter the email address or mobile phone number, then press .

5 Under "Message", press . The picture will come up with the flashing cursor underneath. Enter the message, then press . Press [MENU] to 1. Voice Record, 2. Insert Q.Text, 3. Delete Photo, 4. Insert Sound, 5. Insert Slide or 6. Slide Duration.

6 Under "Subject", enter a subject line for the message. Press .

7 To send the picture, press [MENU] . Press [MENU] to 1. Send, 2. Preview, 3. Save to Outbox, 4. Priority or 5. Expiration.

Refer to page 106 for more details on "New Photo Msg".

1 Press [MENU] or .

- Use up/down keys to change picture size, left/right keys to change zoom and Side up/down keys control rotation on preview mode.
Camera menu provides more settings:
 1. SUB LCD: Enable previewing on external LCD.
 2. FLASH: Provides just enough light to allow pictures to be taken.
 3. SELF TIMER: Set timer to take a self portrait.
 4. IMAGE CONTROLS
 - 4.1 BRIGHTNESS
 - 4.2 IMAGE EFFECT
 - 4.3 CONTRAST
 - 4.4 QUALITY
 5. SHUTTER SOUND: Select a sound to use for shutter.

Chapter 5

VOICE SERVICE

This chapter addresses Voice Service, an advanced feature that allows you to place calls using your voice. With Voice Memo (VM) you can record voice messages and set the Answering Machine. Topics include:

- VOICE TOOLS MENU
- VOICE RECOGNITION MODE

VOICE TOOLS MENU

VOICE MEMO

Voice Memo allows you to record a reminder message that can be up to 60 seconds. To record a memo:

- 1 Press [MENU] to start Voice Tools menu.
- 2 To enter a voice memo, press .
- 3
 - 1.1. To record a voice memo, press . Instructions will be displayed and you will hear "Please record at the tone."
 - 1.2. To stop recording a memo, press [STOP] or [PAUSE/RESUME].
 - 1.3. Press [MENU] after recording a voice memo to "1. Re-record" or "2. Review".
 - 1.4. Press [SAVE] to input a "Voice Memo" title, then press . (See page 31 for more information on entering letters, numbers and symbols.)
 - 1.5. Press [SEND] to access the "New Photo Msg" see "New Photo Msg" on page 106.
2. To play the voice memo, press . Select the message you want to play then press [PLAY] or press [MENU] to
 1. Edit Title or 2. Send. Press [ERASE] to erase the memo.
3. To play the voice memo using the speakerphone, press . Select the message you want to play then press [PLAY] or press [MENU] to
 1. Edit Title or 2. Send. Press [ERASE] to erase the memo.
4. To erase all voice memos, press . "Erase all voice memos?" will be displayed. Press to erase all voice memos.

VOICE TOOLS MENU

VOICE DIAL

Voice Dial allows you to record a voice tag so you can call a person in your phone book simply by saying their name. To access Voice Dial:

- 1 Press [MENU] to start Voice Tools menu.
- 2 To enter Voice Dial, press .
- 3
 - 1.1. To record a voice tag, press . The phone book list will be displayed alphabetically. Select a name, then press . Instructions will be displayed and you will hear "Name Please".
 - 1.2. Say the name for the voice tag and repeat the name when prompted. You will hear "Added".
2. To play a voice tag, press . Highlight the name you want to play then press [PLAY] or press [ERASE].
3. To play a voice tag using the speakerphone, press . Highlight the name you want to play then press [PLAY] or press [ERASE].
4. To erase all voice tags, press . "Removing all voice tags Proceed?" will be displayed. Press to erase all voice tags.

VOICE TOOLS MENU

VOICE TOOLS MENU

TRAIN WORDS

Train allows you to use Control words to make a call without using the keypad.

YES

Use to train or untrain the Voice Recognition with the control word, "Yes".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word yes".
- 3 Say "Yes". You will hear "Again". Say "Yes" again. You will hear "Training word successful".

NO

Use to train or untrain the Voice Recognition with the control word, "No".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word no".
- 3 Say "No". You will hear "Again". Say "No" again. You will hear "Training word successful".

WAKE-UP

Use to train or untrain the Voice Recognition with the control word, "Wake-Up".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word Wake-Up".
- 3 Say "Wake-Up". You will hear "Again". Say "Wake-Up" again. You will hear "Training word successful".

UNDO TRAIN ALL

Undo Train All erases all "trained" words.

- 1 Press [MENU] .
- 2 "Undo voice recognition for all procedures?" will be displayed. Press [OK] to undo all trained words.

VOICE TOOLS MENU

VOICE SETTING

SET ACTIVE

Allows the user to activate or deactivate voice dial service.

- 1 Press [MENU] .
- 2 Select "Active Flip" or "Send Key" by pressing the Navigation Key left or right.
- 3 To activate, press .

HFK MODE

While using the Hands Free Kit, activates or deactivates the voice recognition function.

- 1 Press [MENU] .
- 2 Scroll to HFK Mode. Select "On" or "Off" by pressing the Navigation Key left or right.
- 3 To activate, press .

VOICE RECOGNITION MODE

Voice Recognition (VR) enables you to place calls using your voice and to record voice memos.

- 1 Press and hold until your phone turns to Voice Recognition mode.



If there are no recorded voice dials, "No entries recorded" message will be displayed.

- 2 "Please say the name after the prompt tone" will be displayed and you will hear "Name please".



NAME

- 1 Press and hold until your phone turns to Voice Recognition mode.
- 2 Say a tag name when prompted. The member and name will appear on the display and you will hear "Calling (Name)".

Chapter 6

VOICE MAIL, TEXT AND PHOTO MESSAGE

- WHEN A NEW MESSAGE ARRIVES
- NEW TEXT MSG
- NEW PHOTO MSG
- VOICE MAIL
- INBOX
- OUTBOX
- WEB ALERTS
- SAVED
- QUICK TEXT
- ERASE ALL
- SETTINGS

WHEN A NEW MESSAGE ARRIVES

- 1 When a new message arrives, the screen will show "Msg. arrived."



- 2 To read the message, press **[READ]**.

NEW TEXT MSG

To send a new text message:

- 1 Press **[MENU]**.
- 2 Under "Send To", input the phone number, then press **[OK]**.

- By pressing **[MENU]**, you can choose from the following:
 1. **Find:** Search for a phone number that is stored in the phone book.
 2. **Save:** Stores the phone number the message was sent to.
 3. **Msg. Group:** Search the group that is stored in the contacts list.

- 3 Under "Message", input a new text message, then press **[OK]**.
(Refer to page 31 for more details on entering letters, numbers and symbols.)

- By pressing **[MENU]**, in the message input screen you can choose from the following:
 1. **Insert Quick Text:** Inserts text in Text Msg.
 2. **Insert Sound:** Inserts sound in Text Msg.
 3. **Insert Picture:** Inserts picture in Text Msg.
 4. **Insert Animation:** Inserts Animation in Text Msg.
 5. **Save to Quick Text:** Saves the written sentences into Quick Text.

- 4 The default call back number is automatically input into the Default CB# field.
To edit, press **[EDIT]**.

- 5 Press the Navigation Key down for more fields.
Under "Priority", select "Normal" or "Urgent".

- 6 Under "Insert Signature", select "On" or "Off".

- 7 7.1. To send the text message, press **[MENU]**, select "Send", then press **[OK]**.

- 7.2. To save the text message, press **[MENU]**, select "Save to Outbox", then press **[OK]**.

NEW PHOTO MSG

To send a new photo message:

- 1 Press [MENU] .
 - 2 Phone goes into camera mode automatically. Take a picture, then press .
(Refer to page 90 for more details on taking a photo.)
 - 3 Under "Send To", input the phone number, then press .
- By pressing [MENU], the user can choose from the following:
 1. **Find:** Allows the user to search for phone numbers that are stored in the phone book.
 2. **Save:** Stores the phone number the message was sent to.
 3. **Msg. Group:** Search the group that is stored in the contacts list.
 4. **Online Album:** To send pictures by using the online Address Book.

- 4 Under "Message", input a new text message, then press .


- By pressing [MENU], the user can choose from the following:
 1. **Take Photo:** To take a new photo.
 2. **Voice Record:** To record a voice memo.
 3. **Insert Q.Text:** To insert already saved sentences into text message.
 4. **Insert/Delete Photo:** To insert/delete a picture from your photo gallery.
 5. **Insert/Delete Sound:** To Insert/delete a sound in Photo Msg.
 6. **Insert/Delete Slide:** To insert/delete a picture in Photo Msg.
 7. **Slide Duration:** To select a slide duration time.




NEW PHOTO MSG

- 5 7.1. To send the photo message, press [MENU], select "Send", then press .
- 7.2. To save the photo message, press [MENU], select "Save to Outbox", then press .



- By pressing [MENU], the user can choose from the following:
 1. **Send:** To send a photo message.
 2. **Preview:** To preview a photo message.
 3. **Send to Outbox:** To save a message to "Outbox" folder.
 4. **Priority:** To select priority "Normal" or "High".
 5. **Expiration:** To select expiration time "Off", "1 day", "2 days", "3 days", "4 days" or "5 days".

VOICE MAIL




Displays the number of voice mails and accesses them by pressing .

- 1 To access your voice mail, press  [MENU]  .

FIRST TIME USER

- 1 Dial *86, then press .
- 2 At the recording, press .
- 3 Follow the voice tutorial to set up your account.






EXISTING USER




- 1 Dial *86, then press .
- 2 At the recording, enter your 4 digit password, then press .
- 3 To listen to new messages, press .

INBOX

The Inbox manages received text messages. To access:

- 1 Press  [MENU]  .

-  : Urgent New Msg (not read)
-  : Urgent Read Msg
-  : New Msg (not read)
-  : Old Msg (already read)
-  : Lock Msg (already read and locked)

- 2 Select a message, then press  .
The message is displayed. To delete a message, press  [ERASE].
- 3 Press  [MENU] to view options.

*PHOTO INFO


- 1 Select [Photo Info] to display the photo message information.
(Refer to page 110 "NOTE" for more details.)

**PLAY SLIDE SHOW

A slide show consists of up to 3 pictures in one message including text and/or sound.

- 1 Select [Play Slide Show] to play all slides in a slide show from a photo message. There is a 5 second interval between slides.
(Refer to page 110 "NOTE" for more details.)

REPLY

- 1 Select [Reply] to reply to the message.
- 2 Type your reply, then press .

REPLY WITH COPY

- 1 Select [Reply With Copy] to reply to a message and include a copy of the received message.
- 2 The default call back number is automatically input into the Default CB# field.
Press **OK** to edit it.
- 3 Under "Insert Signature", select "On" or "Off".
- 4 To send the text message, press **OK** [SEND].
- 5 To save the text message, press **OK** [MENU] and select the "Save to Outbox" then press **OK**.

FORWARD

- 1 Select [Forward] to forward the message to another person.
- 2 Input the phone number of the person you are sending the message to, then press **OK**.
- 3 Input any text message to go along with the forwarded message, then press **OK**.

*****SAVE MEDIA**

- 1 Select [Save Media] to save the picture from the received message to the media gallery folder.
(Refer to page 110 "NOTE" for more details.)

SAVE TO CONTACT

- 1 Select [Save to Contact] to save the contact information from the message to your contact list.

SAVE TO SAVED

- 1 Select [Save] to save the message in the Saved folder of your phone.

SAVE TO QUICK TEXT

- 1 Select [Save to Quick Text] to save the received text message to the Quick Text list.

******BLOCK SENDER**

- 1 Select [Block Sender] to block all incoming messages from the sender of the message.

LOCK & UNLOCK

- 1 Select [Lock & Unlock] to lock or unlock the message. When the message is locked, it prevents it from being deleted.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message, then press **OK**.



- *"*Photo Info" menus appear only when you receive a photo message.*
- *"**Play Slide Show" menus appear only when you receive a photo message.*
- *"***Save Media" menu appears only when you receive a photo message or EMS message.*
- *"****Block Sender" menu appears only when you receive a text message.*

OUTBOX

The Outbox manages sent text messages or messages waiting to be sent.

CHECKING SENT TEXT MESSAGES

1 Press [MENU] .

- : Cance Msg
- : Fail Msg
- : Not Sent Msg
- : Sent Msg

2 2.1. Select a message, then press .
The text message is displayed.

2.2. To erase message, press [ERASE].

3 Press [MENU] for more options.

*PHOTO INFO

1 Select [Photo Info] to display the photo message information.
(Refer to page 112 "NOTE" for more details.)

RESEND

1 Select [Resend] to resend the message.

OUTBOX

EDIT MESSAGE

1 Select [Edit Message] to edit the message.

2 Input a text message, then press .

3 Input the phone number, then press .

SAVE TO CONTACT

1 Select [Save to Contact] to save the number to your contacts list.

SAVE TO SAVED

1 Select [Save] to save the message in your Saved folder.

LOCK & UNLOCK

1 Select [Lock & Unlock] to lock or unlock the message.

2 Select "Lock" to lock the message or "Unlock" to unlock the message, then press .

**STATE

1 Select [State] to display the status of the message.



- *"Photo Info" menus appear only when you receive a photo message.
- *"State" menu appears only when you receive a text message.

WEB ALERTS

WEB ALERTS

When a message includes a URL or web address, it stores in this area.

- 1 Press [MENU] .
- 2 To select GoTo, press .
To select Erase Message, press .
- 3 The Web Alerts message will be displayed.

- : Web Alerts Unread
- : Web Alerts Read
- : Web Alerts Multi
- : Web Alerts Expire
- : Web Alerts Store

SAVED

SAVED

This is a folder that stores saved messages from the Inbox/Outbox.

- 1 Press [MENU] .
- 2.1. Select a text message then press .
The text message is displayed.
- 2.2. To erase message, press [ERASE].
- 3 Press [MENU].
- 4 If the text message is saved from the "Inbox" menu, this screen will be displayed.

- To select inbox menu : *Photo Info, **Play Slide Show, Reply, Reply With Copy, Forward, Save to Quick Text, ***Save Media, Block Sender, Save to Contact, Lock & Unlock

If the text message is saved from the "Outbox" menu, this screen will be displayed.

- To select outbox menu : *Photo Info, Resend, Edit Message, Save to Contact, Lock & Unlock, ****State
- 5 Select one by pressing .



- ***Photo Info* or ***Play Slide Show* menu only appears when you receive a photo message.*
- *****Save Media* menu appears only when you receive a photo message or EMS message.*
- *****State* menu appears only when you receive a text message.*

QUICK TEXT

QUICK TEXT

Quick Text is a short message that you can use over and over again, when sending a text message or photo message. Here, you can edit the Quick Text messages that you have saved or add new ones.

- 1 Press [MENU] .
- 2 2.1. Select a message from the list.
Press [MENU].
2.2. To add a new quick text message, press [ADD NEW]. To edit the quick text message you have selected, press [EDIT].
- 3 To erase the saved quick text message, press [ERASE].

ERASE ALL

ERASE MESSAGES

- 1 Press [MENU] .
- 2 1. To erase all the inbox messages, press .

- Read Msg : To erase all messages already read. (However, the locked Message(s) will not be deleted).
 - Read & Unread Msg : To erase all messages.
2. To erase all the outbox messages, press .
3. To erase the saved messages, press .
- 3 Select [OK] or [CANCEL].

SETTINGS

Manages messaging features through various features.

AUTO SAVE

SAVE SENT MSG

- 1 Press [MENU] .
- 2 Press .
Select either "Off", "On" or "Prompt" with the Navigation Key.
- 3 Press .

PHOTO RECEIVE

- 1 Press [MENU] .
- 2 Press .
Select "Automatic" or "Prompt" with Navigation Key.
- 3 Press .

SETTINGS

AUTO ERASE

Automatically erases inbox/outbox messages when new messages arrive.

INBOX

- 1 Press [MENU] .
- 2 Press .
Select "Disable" or "Enable" with Navigation Key.
- 3 Press .

OUTBOX

- 1 Press [MENU] .
- 2 Press .
Select "Disable" or "Enable" with Navigation Key.
- 3 Press .

SETTINGS

DEFAULT CALLBACK

Edits a default callback number so that the recipient can callback or reply.

1 Press [MENU] .

2 Press .
Input a callback number, then press .

- You can look it up from the phone book by pressing [FIND].

EDIT VOICE CALLBACK

1 Press [MENU] .

2 Press .
Input a new voice callback number or edit voice call back number.

- You can look it up from the phone book by pressing [FIND].

3 Press .

REMIND

1 Press [MENU] .

2 Press .
Select "Off" or "On" with the Navigation Key.

3 Press .

SETTINGS

EDIT SIGNATURE

Create a signature that can automatically be inserted at the end of a message.

1 Press [MENU] .

2 Press .
To input "Signature", put the cursor on Edit Signature, then enter Signature Edit window by using right or left direction keys.

3 To activate Signature function, put the cursor on Insert Signature, then select "On" by using right or left direction keys. To deactivate Signature function, select "Off".

4 Press .

DIRECT VIEW

If the Direct View is set to on, the user will be able to view the message by pressing the read key. If the Direct View is set to off, the user can view the message by entering Messaging Menu-> Inbox.

1 Press [MENU] .

2 Press .
Select "Off" or "On" with the Navigation Key.

- Off : Set to read msg through the Messaging Inbox menu.
- On : Set to read msg without going to Messaging Inbox menu.

3 Press .

ENTRY MODE

This sets the default for text entry mode. Alpha Mode is for entering alphabets one letter at a time. T9 mode is for entering common word that is stored in the phone's built-in dictionary.

1 Press [MENU] .

2 Press .
Select "Alpha Mode" or "T9 Mode" with the Navigation Key.

3 Press .

BLOCK OR UNBLOCK

This allows you to block or unblock email address(es).

1 Press [MENU] .

2 Press .
Select "Block", "Unblock" or "View List of Blocked Addresses" with the Navigation Key.

- Block : Enter the address to block.
- Unblock : Enter the address to remove from block.
- View List of Blocked Addresses : Display the blocked list on LCD.

3 Press .

Chapter 7

WEB BROWSING

This chapter addresses Internet services and web browsing. For more detailed information contact your service provider.

- START INTERNET BROWSER
- BROWSER MENU

START INTERNET BROWSER

ACCESS THE INTERNET

- 1 To start your Internet browser and access websites through your wireless handset, press [MENU] or .
↓

BROWSER MENU

The browser menu lists the actions necessary to operate the browser. To access press [MENU] .

HOME

When the home item is selected from the browser menu, the phone displays the home page.

- 1 To display the homepage, press [MENU], then press .

BACK

- 1 To return to the previous page, press [MENU], then press .

HISTORY

The history list is available from the Browser Menu and the user may delete all items from the history.

- 1 To select "History", press [MENU], then press .

BROWSER MENU

SETTINGS

- 1 To select "Settings", press [MENU], then press .

- **Downloads** : Selecting the "Downloads" item allows the user to enable/disable downloading images, background sounds, and object downloads when a URL is accessed.
- **Restart Browser** : Selecting "Restart Browser" causes the history and cache to be cleared and returns the user to the homepage.
- **Scroll Mode** : Selecting "Scroll Mode" from the Settings menu allows the user to select the way text scrolls and the scroll speed.
- **Send Referrer** : When the "Send Referrer" item is selected from the Settings menu, the browser allows the user to turn on or off sending the referrer URL.
- **Key Press Time Out** : When the "Key Press Timeout" item is selected from the Settings menu, the browser allows the user to set the key press timeout as fast, medium or slow. Medium is 1.5 seconds, slow 2 seconds and fast is 1 second. The key press timeout is the period of time after which the cursor auto-advances to the next entry position. In most cases, a single key can be used to enter more than one character. Each time the key is pressed the last character of the line is replaced by the next choice for that key. As long as the same key is re-pressed within key press timeout, the last character cycles between all the choices for the key.
- **Connection Time Out** : When the Connection Timeout item is selected from the Settings menu, the browser allows the user to set the connection timeout. The connection timeout determines how long the browser will wait for a response from the network for a network request.

BROWSER MENU

CLEAR

The user may clear cache, history, cookies and auto fill from the memory.

- 1 To select "Clear", press [MENU], then press .

SHOW URL

Displays the current URL.

- 1 To select "Show URL", press [MENU], then press .

RELOAD

Selecting the refresh item from the browser menu refreshes the current page.

- 1 To select "Reload", press [MENU], then press .

SEND LINK

Send Link item lets the user send the URL of the current site using SMS.

- 1 To select "Send Link", press [MENU], then press .

EXIT

- 1 To exit browser, press [MENU], then press .

Chapter 8

SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
- SAFETY INFORMATION FOR FCC RF EXPOSURE
- SAR INFORMATION
- FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES
- FDA CONSUMER UPDATE
- PROTECT YOUR WARRANTY
- 12 MONTH LIMITED WARRANTY

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld Portable Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

1* : American National Standards Institute.

2* : National Council on Radiation protection and measurements.

3* : International Commission on Nonionizing Radiation Protection.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

POSTED FACILITIES

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.



DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.



DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.



DO NOT expose this equipment to rain or spilled beverages.



DO NOT use unauthorized accessories.



DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.



DO NOT short-circuit the battery terminals with metal items etc.



WARNING!

- This product contains a chemical known to the State of California to cause cancer.
- This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at www.fcc.gov

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.15 W/Kg and when worn on the body, as described in this user guide, is 0.393W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4PN-E218.

SAR INFORMATION

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

 
While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

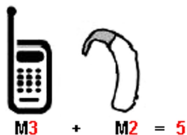

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phone

- **Fcc Hearing Aid Compatibility and Volume Control**
<http://www.fcc.gov/cgb/dro/hearing.html>
- **Gallaudet University, RERC**
<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>
- **Self Help for Hard of Hearing People Inc. [SHHH]**
www.hearingloss.org/hat/TipsWirelessPhones.htm
- **The Hearing Aid Compatibility FCC Order**
http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf



1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;

and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones.

These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineers (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrpb.org.uk/>)

PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Pantech product. Be careful. Some of these products may not be compatible to use with your Pantech product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Pantech accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Pantech product.



PANTECH WIRELESS, INC.

11240 Warland Drive, Cypress, CA 90630 (800) 962-8622

12 MONTH LIMITED WARRANTY

Pantech Wireless, Inc. (the Company) warrants to the original retail purchaser of this Pantech handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) months period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, key pad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company by calling the number listed below or to the place of purchase for repair or replacement processing.

12 MONTH LIMITED WARRANTY

In addition, you may telephone us at (800) 962-8622, or email us at HandsetHelp@Pantech.com

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.